


How to Checkout a Bicycle


1

Use the Movatic App on your phone to select the bike station you want to rent the bike from. Press 'Rent a Bike at this Station'.

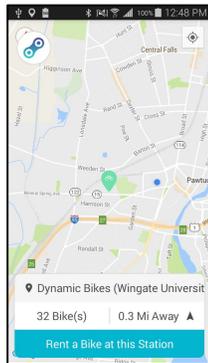


2

Choose the key box for the bicycle you want to checkout. The App will give you a PIN code for the selected key box.

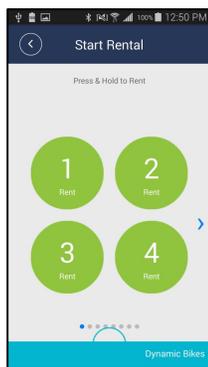

3

You will receive a PIN code for the key box you selected.

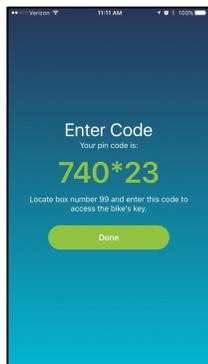

4


Enter the PIN code onto the keypad on the key box, and press **ENTER**.

Slide the latch down to open the key box.




5

Remove the bicycle key.

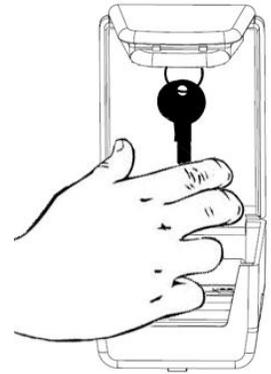

6


Close the key box door, slide the latch up, and press the **ENTER** button to confirm it is electronically locked.

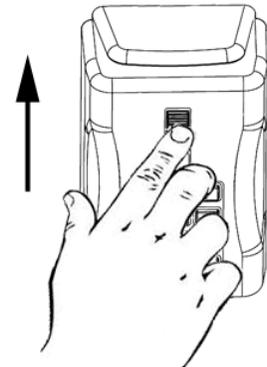

IMPORTANT
Confirm that the latch is locked.

7


Use the key to unlock the bike by inserting the key into the integrated lock and turning the key clockwise. The key stays in the lock.

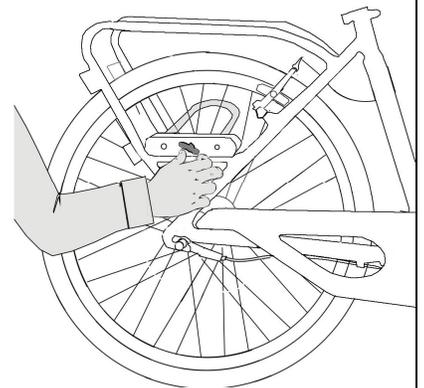

8

Remove the U-bar from the lock and store on the back of the bicycle frame.


The bike is yours to ride.

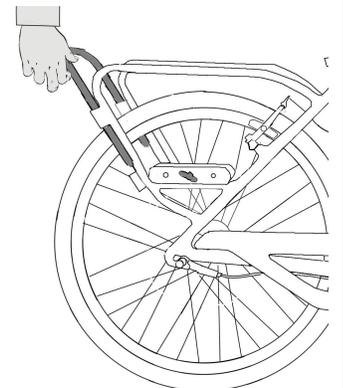

How to Return a Bicycle


1

Remove the U-bar from the back of the bicycle frame. Position bicycle next to bike rack with corresponding key box for this bicycle.

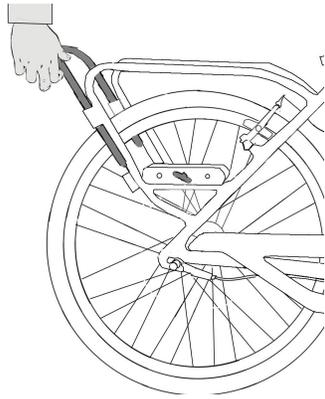

2


Position the U-lock around bike rack, and snap the U-bar into the lock on the bicycle frame to lock the bike.

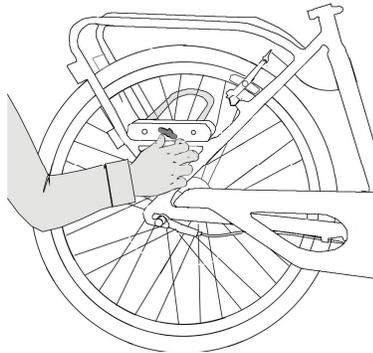

Remove the key from the lock.


3

From within the Movatic App on your phone, press the icon in the upper right corner to show details of your current rental. Press 'End Rental'.

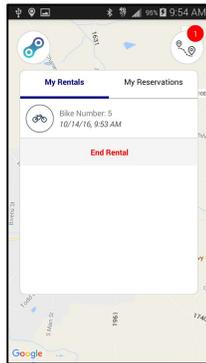

4

You will receive a PIN code for the key box.

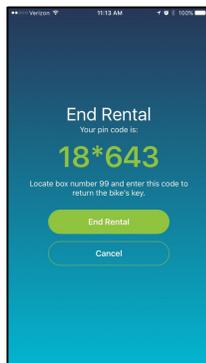


5

Enter the PIN code onto the keypad of the key box.




6

Slide the latch down to open the key box door.

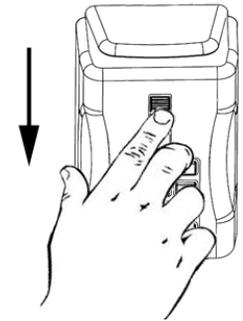


7

Return the bicycle key to the key box.

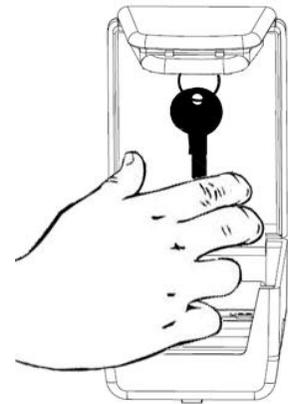

8

Close the key box door, slide the latch up, and press the ENTER button to confirm it is electronically locked.

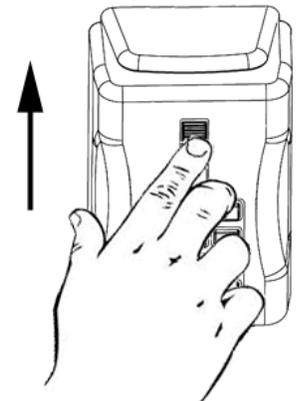

IMPORTANT
Confirm that the latch is locked.